


3D three-dimensional design with fluffy, breathable and soft, will not cause the fog when wearing glasses. Adjustable nose bridge and elastic earloop has enough elasticity to make a good seal.

Multilayer protection, can filter out dust, germs, smoke, pollution and 95% particles in the air PM 0.3

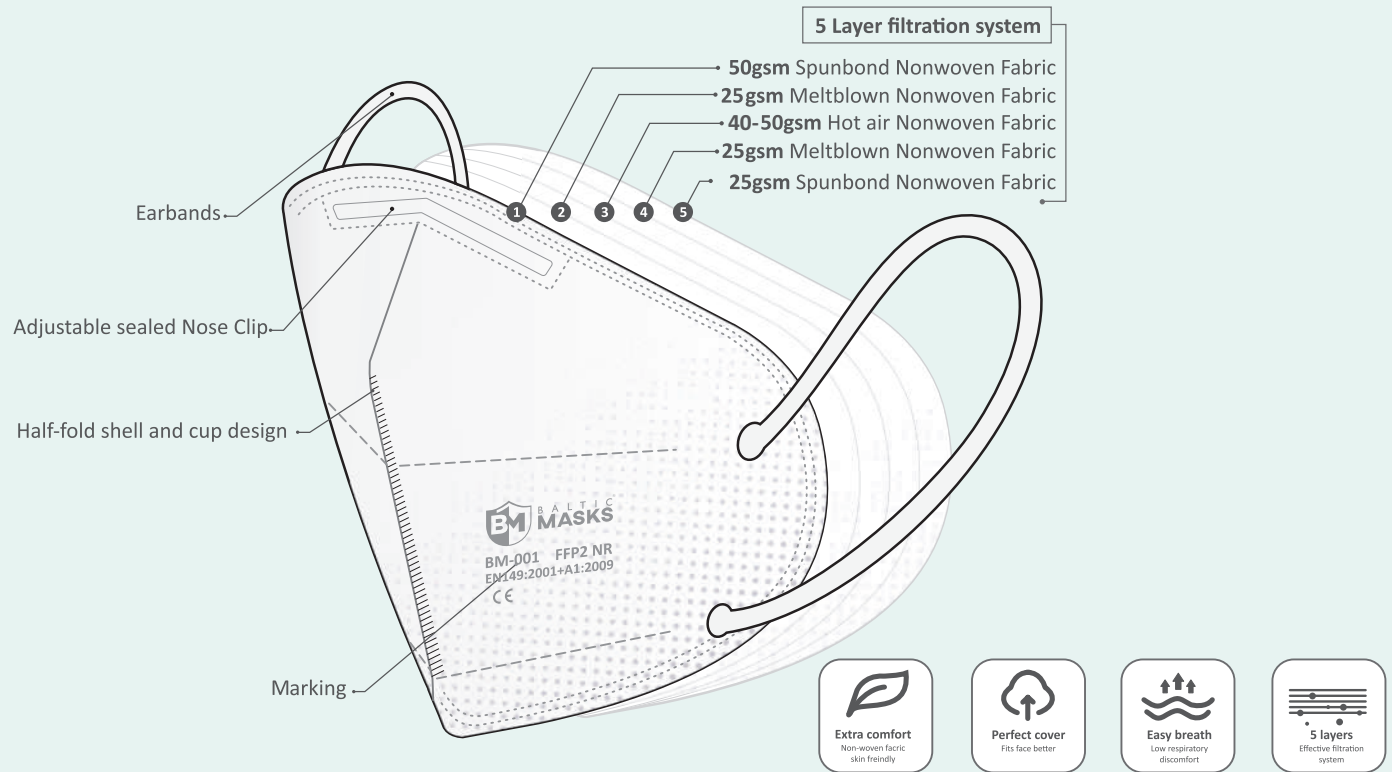

Protection-class face masks are made for environments in which harmful and mutagenic particles can be found in the air we breathe. Respirator masks of this class provide a barrier to at least 95 % of particles measuring larger than 0.3 micron and may be used in environments where hazardous substances exceed the OEL by up to a maximum of tenfold concentration. Our filter system, with a layer of meltblown cloth, protects wearers from unpleasant odours and particles on top of the required breathing protection.

## Typical Applications:


- Personal Protection,
- Base Metal Manufacture,
- Pharmaceuticals,
- Laboratories,
- Foodstuffs e.g. Bagging,
- Powdered Additives,
- Powdered Chemicals,
- Sawmills

## Advanced Filter Media

1. 50gsm Spunbond Nonwoven
2. 25gsm Meltblown Nonwoven
3. 40-50gsm Hot air Nonwoven
4. 25gsm Meltblown Nonwoven
5. 25gsm Spunbond Nonwoven

- Consistent high level performance
- Effective filtration combined with low breathing resistance.

## Extra optional EAR hook stripe system

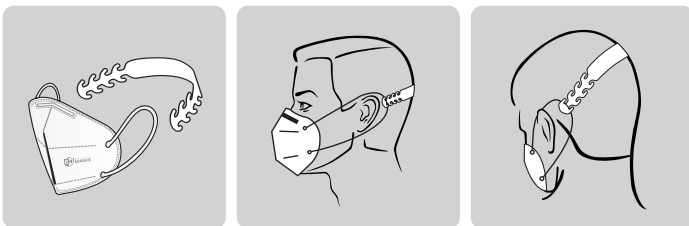

For additional information and limitations of use please contact our technical department at [info@balticmasks.com](mailto:info@balticmasks.com). Specifications may change without prior notification.

## EU Declaration of Conformity

REGULATION (EU) 2016/425 OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 9 March 2016 on personal protective equipment and repealing Council Directive 89/686/EEC

*This is hereby declared that following designated product complied with the essential health and safety requirements of above Council Directive (s) on the approximation of the laws of the Member State relating to it*

**MANUFACTURER:**

InSpe, Savanoriu ave. 178F, Vilnius, Lithuania

**PRODUCT**

FOLD FLAT MASK

**PRODUCT NAME:**

BALTIC MASKS

**CLASSIFICATION:**

FFP2

**MODEL:**

BM-001 ( fold flat mask)  
BM-001V ( fold flat mask with valve )

**CERTIFICATE:**

EN149:2001+A1:2009

EU Type Examination Certificate Number:

CW/PPER/74/06/2020 ( BM-001 )

CW/PPER/75/06/2020 ( BM-001V )

**CONFORMITY ASSESSMENT PROCEDURE  
ACORDING TO ( EU) 2016/425**

Certificate Number (Module C2):

CW/PPER/54/01/2021 ( BM-001 )

CW/PPER/55/01/2021 ( BM-001V )

**NOTIFIED BODY INFORMATION:**

Polski Rejestr Statków S.A(NB ID: 1463)

This declaration applies to all specimens manufactured identical to the model submitted for evaluation. Assessment of compliance of the product with the requirements relating to safety standards and legal requirements listed above was performed by manufacturer. Other relevant legal requirements for product and manufacturing have to be observed.



VILNUS, LITHUANIA, DATE 2021 02 02  
General Manager Guy Shapira



This declaration is the responsibility of the Manufacturer

Document valid until 2022 02 02.